



FreedomView® LED Videoscope








The handheld FreedomView® LED Videoscope transforms your field inspections with our patented, integrated LED light source and compact handle design, providing exceptional visibility and flexibility. The FV Videoscope's sleek design allows you to conduct a variety of inspections quickly and safely. Priced with your budget needs in mind, the FV Videoscope puts the most challenging inspections within your reach, in seconds.

- Store 8,000+ still images
- Capture still images + streaming video
- JPG and AVI files
- Time & date stamp6 hours operating time
- o nours operating time
- One Hand Operation



Kits are packaged in a rugged carrying case. Kits include (2) rechargeable li-ion batteries, charger cradle with AC power supply 12VDC power cord, 8GB SD memory card, USB to PC streaming software, USB 2.0 cable and operator's manual. Optional accessories include videoscope stand, flexible protective guide tube, window wedge, sun shield and neck strap.

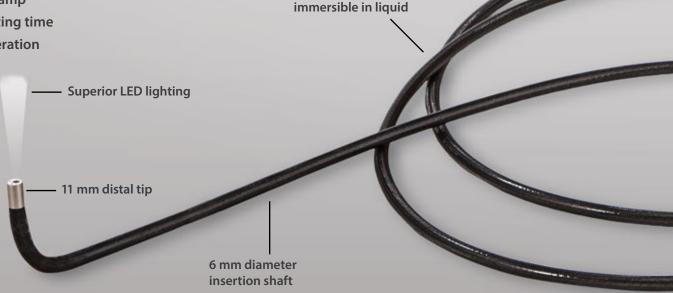


Insertion shaft



Specifications & Information

Flexible length	2.0m (79")
Shaft diameter	6.0mm
Exterior	Tungsten Braid
Weight	1,000 g / 2.3 lbs
Articulation	Joystick Control - 110° up/down/left/right
Depth of field	5mm to ∞
Field of view	80°
Illumination	Integrated LED Light Source
Image Capture	Still images and Streaming video
USB Output	Mini B Terminal Ver 2.0 Video Capture
Media Storage	SD Card
Media Storage Location	Side access
Screen Resolution	640 x 480
Still Image	JPEG format
Streaming Video	Motion JPG (AVI file extension)
Removable Storage Capacity	Approx. 8000 images (8 GB SD card)
Still Image Display	Full screen display or thumbnail (9-images)
Video Controls	Play / Pause
Stored Image Delete	Yes
Time and Date Stamp	Yes
Language	English
Operating Temperature	Device Temp -20°C to 40°C Shaft Temp -20°C to 70°C
Power Supply	Rechargeable Li-Ion Battery
Battery Life	6 hours operating time

OptiluX[™] Patented lighting design; more light, better image

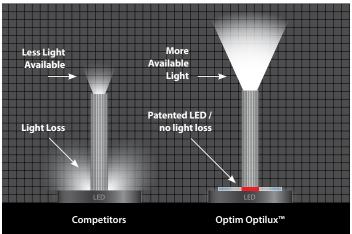

Optim's unique LED light source to fiber light guide coupling technology, Optilux™, in the FreedomView® Videoscope brings unmatched illumination to the end of the scope, where it counts.

Joystick control allows 110° articulation up/down/left/right



All Optim industrial products are compliant with cGMP (current good manufacturing practices) and produced in our Sturbridge, MA, facility to ensure adherence to stringent quality requirements and responsive service and support.

Service and Repair:

Exceptional customer service is a hallmark of our business at Optim. We recognize the professionals who use our products rely on them to achieve their goals. To ensure their satisfaction, we maintain close relationships with our customers and provide the highest level of service on a day-to-day basis.

Should an Optim product ever need service or repair, we provide expert, responsive service right here in the USA at our manufacturing facilities in Sturbridge, MA.

Warranty:

All Optim products offer a standard one-year warranty against manufacturer parts and workmanship.

The FreedomView Videoscope is ideal for:

- Aviation Engine Inspection
 Military Inspections
- Gas Turbine Inspection
- NDT Inspections
- Power Generation
- US Customs & Border Protection
- Contraband Search Inspections
- Law Enforcement (Interdiction & Tactical)









Optim LLC

64 Technology Park Road, Sturbridge, MA 01566 Toll-free: 800.225.7486 Worldwide: 1.508.347.5100 Fax: 508.347.2380 www.optim-llc.com Email: sales@optim-llc.com

Optim is ISO 9001:2008/ ISO13485:2003 Certified





